



## **BATTERY LEVEL INDICATOR**

With the lamp switched off, single click either switch to check the battery status.



### **DUAL SWITCHES**

Quickly choose between spotlight and floodlight



#### LOCKOUT FUNCTION

Lock: With the lamp switched off, press and hold either of the two switches, or simultaneously press the two switches for 3 seconds, the lamp will blink twice to indicate locked status.

Unlock: With the lamp is locked, simultaneously press the two switches for 3 seconds, the lamp will be activated with 3 one-second blinks and activated on Low of floodlight mode.

#### **U** ON/OFF

Press and hold either of the two switches to turn on/off the lamp. (Low output level is selected by default.)

#### MODE SWITCHING

With the light switched on, single click either of the two switches to reach the corresponding mode.(Low output level is selected by default.)

#### **OUTPUT SELECTION**

Floodlight mode: Single click the floodlight switch to cycle through Low—High—SOS.

Spotlight mode: Single click the spotlight switch to cycle through Low→ Med→High→Turbo.

# INNOVATIVE STRUCTURE IMPROVED PERFORMANCE

